

**Serial Monitor Line Types:** The Serial Monitor will assign a value for each line, even if there is no input or when the user is typing in a value to be read by the program.

**New Line:** Inputs a Default Value for the Serial Monitor

**No Line Ending:** Will Cancel the Default Value for the Serial Monitor

**Carriage Return:** Used for Non Alpha-Numeric Characters

**Both NL & CR:** Used are defined in ASCII Code and can send Decimal Values

## Tutorial 2: Multiple LED's Change Line Mode from New Line to No Line Ending

